



RCA Pro10 Edition Camera Replacement

Written By: Dayne Russell






TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Speaker

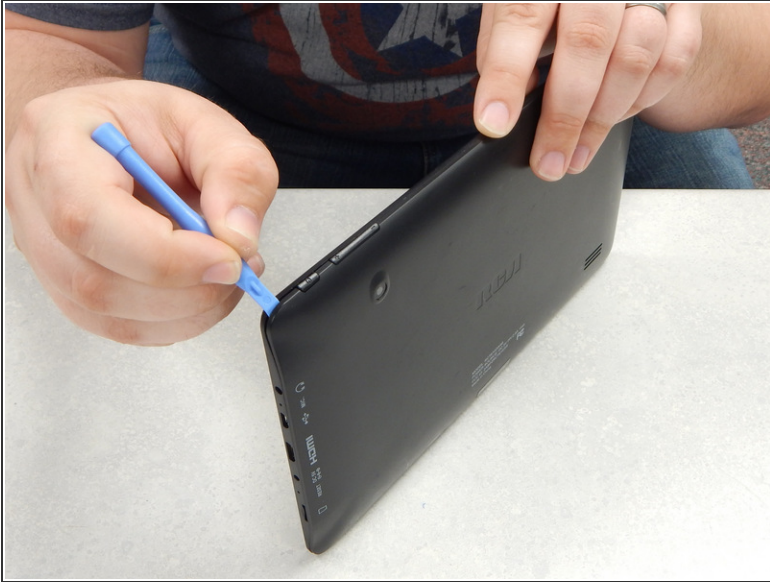



- Using a separating tool, look for a seam in the plastic casing that looks most accessible.
 - Use the prying tool to separate the front and back casing, working your way around the perimeter.
 - Utilize a card tool or a pick to assist in keeping the case separated.
- ☒ To reassemble the device simply align the two casing halves and pinch to snap together or press down on the edges while the device is on a table.

Step 2

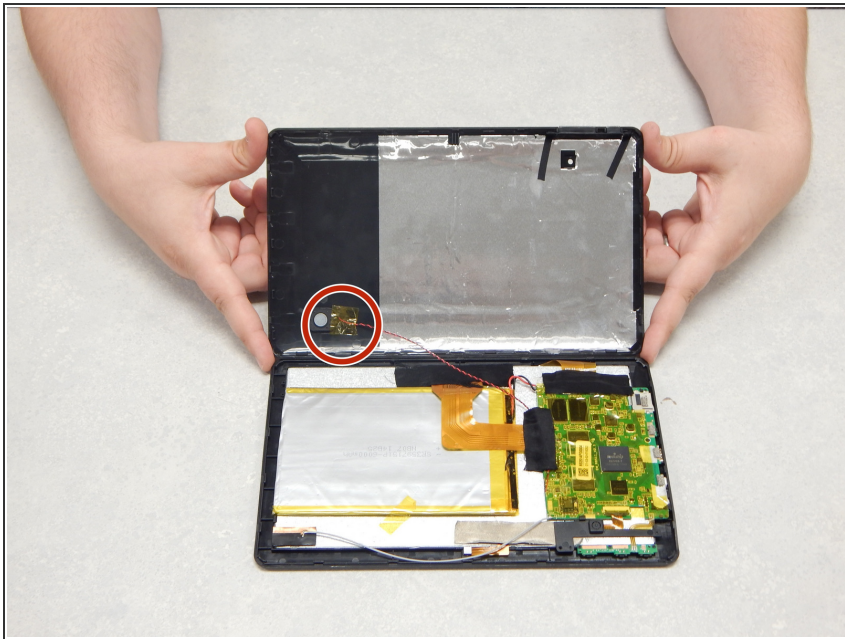


- Flip over the back of the device while keeping it close to the front, the speaker is attached to it.
- Remove the yellow tape securing the speaker to the back casing.

Step 3

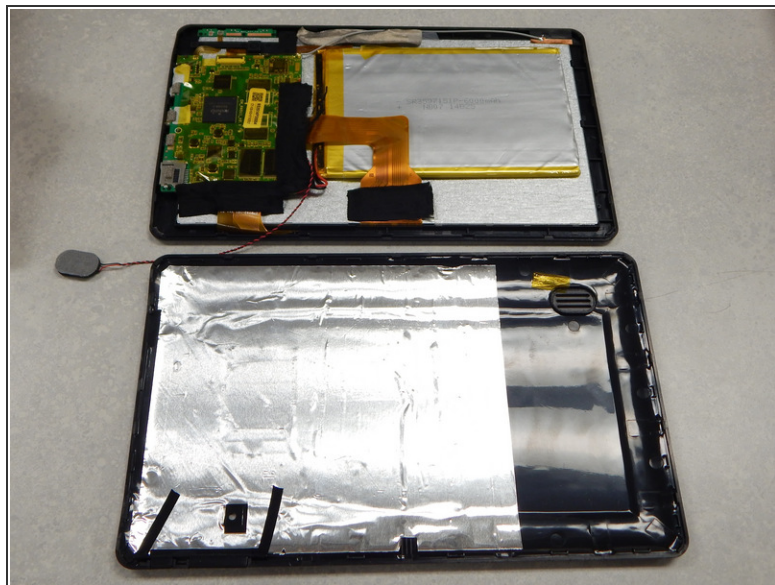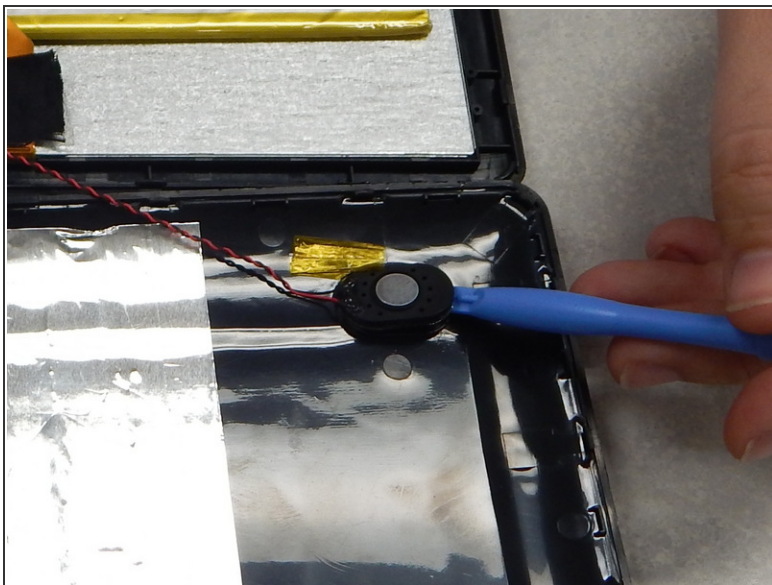


- Use the separating tool to pry the speaker from its surface.
⚠ Use caution when removing the speaker, you may damage the screen.
- Cut or desolder the wires to replace or repair the speaker.

Step 4 — Camera

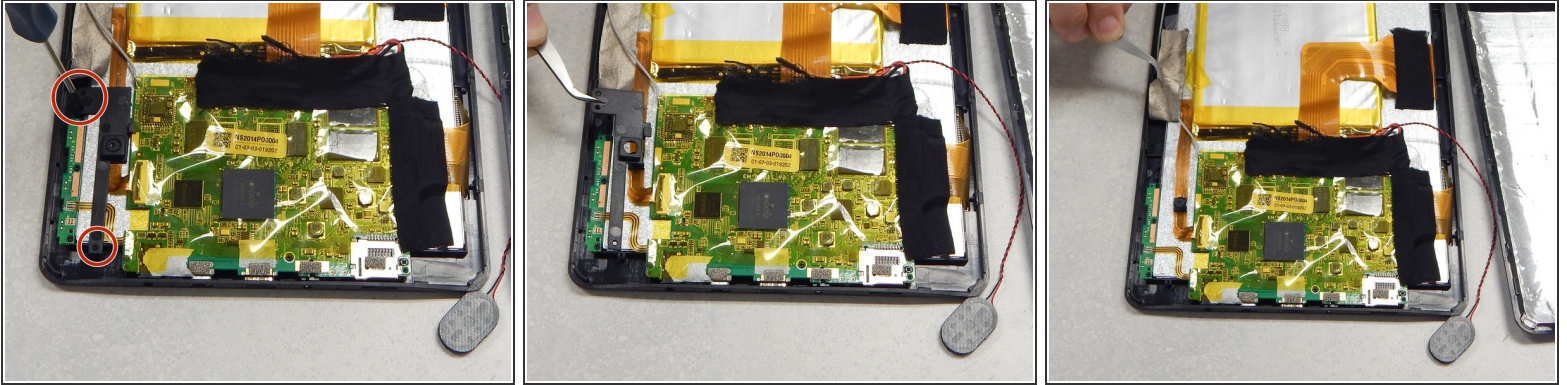

- Using a P00 Phillips screwdriver, remove the three screws securing the black plastic camera housing and remove it.
- Peel back the beige tape while holding down the camera ribbon cable to prevent tears

Step 5

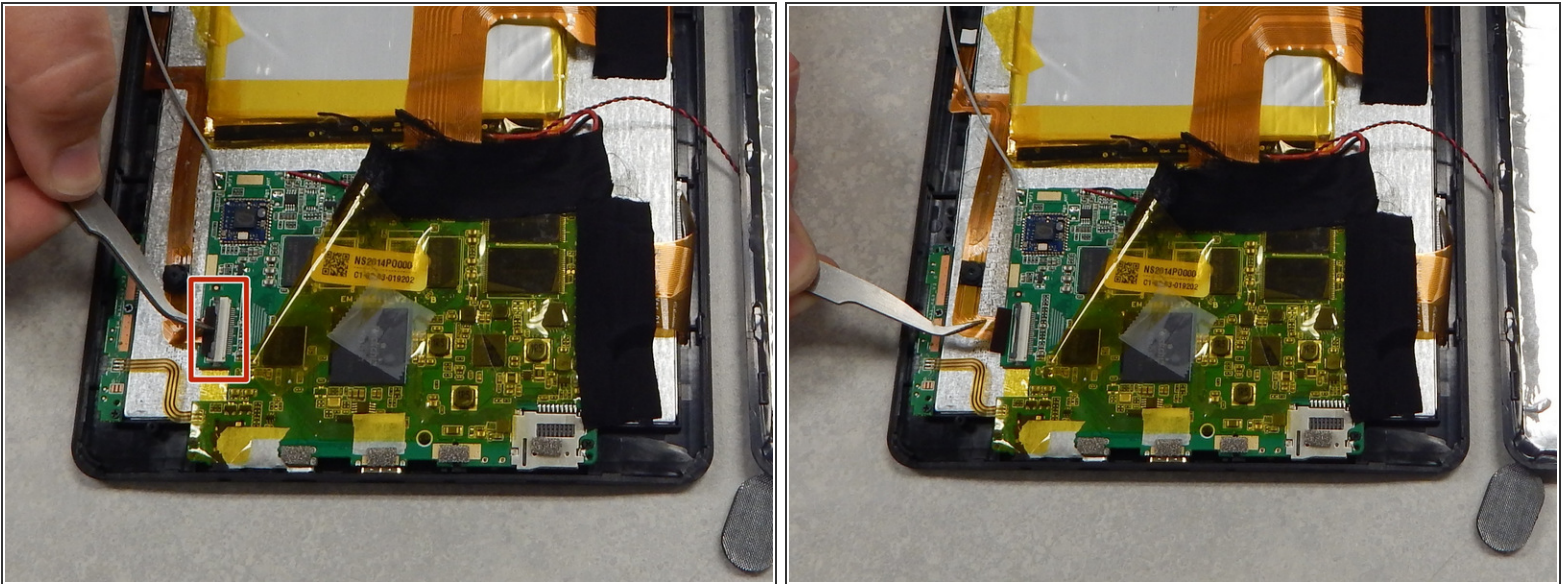

- Lift the locking tab that is securing the camera ribbon cable.
- Slide the ribbon cable out from the connector and remove from casing.

To reassemble your device, follow these instructions in reverse order.

